

# IMPRESA SHOWERS LIMITED

## CUSTOM SHOWER WORKSHEET



## STILE SHOWER &amp; STILE STAINLESS SHOWER

## CUSTOM WORKSHEET

CLIENT NAME: EMAIL: PHONE:

BUILDER NAME: EMAIL: PHONE:

SITE ADDRESS: DELIVERY ADDRESS:

Provide information below for only one shower per worksheet. If possible, send a bathroom floor plan or a simple hand-drawn bathroom layout. Impresa will provide a 3D model of the required shower and send to the client for confirmation prior to manufacture. Contact Impresa for assistance if required -- Phone 09 273 4545

## BATHROOM NAME / NO:

**SHOWER BRAND** (Tick option) STILE STILE STAINLESS  
**SHOWER TRAY-ONLY** (Tick option) **SHOWER TRAY & GLASS** (Tick Option)

## SHOWER TRAY DESIGN (Tick option)

CORNER TRAY	C1	C2	C3	C4	C5	C6
ALCOVE TRAY	A1	A2	A3	A4		

## TRAY-TYPE INSTALLATION (Tick option)

'ON-FLOOR' TRAY (INSTALLED ON TOP OF FLOOR)

'LEVEL-ENTRY' TRAY (INSTALLED INTO RECESSED FLOOR WITH 18mm 'STEP-DOWN' IN TRAY)

'WHEELCHAIR' TRAY (INSTALLED INTO RECESSED FLOOR 'FLUSH' WITH FLOOR / NO 'STEP-DOWN' IN TRAY)

## SUB-FLOOR MATERIAL (Tick option)

CONCRETE	PLYWOOD / PARTICLE BOARD	T&G	COMPRESSED SHEET / SCYON SECURA
FIBRE CEMENT BOARD UNDERLAY 6mm		UNDERFLOOR HEATING 4mm approx.	

## BATHROOM FLOOR FINISH MATERIAL / THICKNESS (Tick option)

TILE	STONE	ORIGINAL T&G	OVERLAID T&G	OTHER
------	-------	--------------	--------------	-------

## SHOWER WALL LINING (Tick option)

VILLABOARD 9mm	PLASTERBOARD 10MM	PLASTERBOARD 13MM	OTHER
----------------	-------------------	-------------------	-------

## SHOWER WALL FINISH MATERIAL / THICKNESS (Tick option)

TILE	PORCELAIN SHEET	SERATONE / AQUAPANEL / HARDIGLAZE	ACRYLIC LINER
------	-----------------	-----------------------------------	---------------

**WASTE-OUTLET HOLE POSITION**

**WASTE-OUTLET HOLE POSITION:** Draw position of waste hole on Plan View drawing attached

OPTION 1 (STANDARD): 100 x 100mm centre off Rear and Side wall framing (Tick to confirm)\_\_\_\_\_

OPTION 2 (STANDARD): Centre of tray (Tick to confirm)\_\_\_\_\_

OPTION 3: (CUSTOM) (Min. 250mm off framing. Draw position on Plan View drawing)

OFF REAR FRAME\_\_\_\_\_MM      OFF LEFT-HAND FRAME\_\_\_\_\_MM      OFF RIGHT-HAND FRAME\_\_\_\_\_MM

**NOTE:** Check for joists and obstructions under floor

**GLASS ENCLOSURE DETAILS**      N/A\_\_\_\_\_ ( Tick if glass not required )

From the website Technical Page > Glass Enclosure Options PDFs, select the enclosure required ( Type 'A' thru 'Z' )  
and record here \_\_\_\_\_

**DOOR WIDTH REQUESTED:** \_\_\_\_\_MM (Ensure door arc clears any adjacent towel rail, toilet, vanity, bath, etc).

**SLIDING DOOR ENCLOSURE:** ( Tick if Required )\_\_\_\_\_ Impresa will calculate & confirm the maximum door width & position

**GLASS HEIGHT:** (Tick option) Standard 2000MM off tray\_\_\_\_\_ Optional Height (tile joint, door, mirror, etc)\_\_\_\_\_MM

**GLASS TYPE:** (Tick option) Standard Clear-Float\_\_\_\_\_ Low Iron / Ultra Clear\_\_\_\_\_

**GLAZING CHANNEL FINISH -- STANDARD:** MATTE 'NATURAL' ALUMINIUM \_\_\_\_\_

**OPTIONAL FINISH:** BRIGHT POLISHED \_\_\_\_\_ BRUSHED STAINLESS \_\_\_\_\_ BRUSHED NICKEL \_\_\_\_\_ BLACK \_\_\_\_\_

**HANDLE TYPE & FINISH**      N/A\_\_\_\_\_ ( Tick if handle not required )

**STANDARD HANDLE:** ROUND 'D' / Polished Finish (Tick if required)\_\_\_\_\_

**OPTIONAL HANDLE:** (Tick option) SQUARE D\_\_\_\_\_ ROUND H\_\_\_\_\_ SQUARE H\_\_\_\_\_ SQUARE PULL\_\_\_\_\_

**HANDLE FINISH:** (Tick option) POLISHED STAINLESS \_\_\_\_\_ BRUSHED STAINLESS \_\_\_\_\_ BRUSHED NICKEL \_\_\_\_\_

BLACK \_\_\_\_\_

**HANDLE ORIENTATION:** (Tick option) VERTICAL (Standard)\_\_\_\_\_ HORIZONTAL (Optional)\_\_\_\_\_

**HINGE TYPE & FINISH**      N/A\_\_\_\_\_ (Tick if hinges not required)

**STANDARD HINGE:** CHROME ON BRASS (Tick if required)\_\_\_\_\_

**OPTIONAL HINGES:** (Tick option) BRUSHED STAINLESS \_\_\_\_\_ BRUSHED BRASS \_\_\_\_\_ BRUSHED NICKEL \_\_\_\_\_ BLACK \_\_\_\_\_

**ALCOVE TRAY / ON-FLOOR**

Complete this section only if an **alcove** shower tray is to be installed **onto** a bathroom floor. Provide measurements as requested below. See the Alcove Tray Plan View Page 4 drawings for assistance to determine the required measurements. Contact Impresa for assistance if required.

REAR WIDTH FRAME TO FRAME \_\_\_\_\_ FRONT WIDTH FRAME TO FRAME \_\_\_\_\_

REAR FRAME TO FRONT OF TRAY THRESHOLD \_\_\_\_\_ REAR FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

REAR FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

**FOUR-WALL ALCOVE SHOWER ONLY**

REAR FRAME TO FOURTH WALL \_\_\_\_\_

FOURTH WALL LENGTH \_\_\_\_\_

FOURTH WALL THICKNESS \_\_\_\_\_

**ALCOVE TRAY / RECESSED-FLOOR**

Complete this section only if an **alcove** shower tray is to be installed **into** a recessed bathroom floor. If framing is in-situ and the recessed / rebated shower floor has been created prior to completing this form, provide measurements as requested below. See the Alcove Tray Plan View Page 4 drawings for assistance. If recessed floor has not been created, contact Impresa for required shower-floor depth.

BATHROOM FLOOR TO SHOWER FLOOR DEPTH (i.e. PLY TO PLY / CONCRETE TO CONCRETE) \_\_\_\_\_

REAR WIDTH FRAME TO FRAME \_\_\_\_\_ FRONT WIDTH FRAME TO FRAME \_\_\_\_\_

REAR FRAME TO RECESSED-FLOOR FRONT EDGE (if recess is formed) \_\_\_\_\_

REAR FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

**FOUR-WALL ALCOVE SHOWER ONLY**

REAR FRAME TO FOURTH WALL \_\_\_\_\_

FOURTH WALL LENGTH \_\_\_\_\_


FOURTH WALL THICKNESS \_\_\_\_\_

CUSTOM WORKSHEET / PLAN VIEW


3-WALL AND 4-WALL ALCOVE TRAY

ON-FLOOR OR RECESSED FLOOR INSTALLATION

SHOWER A1

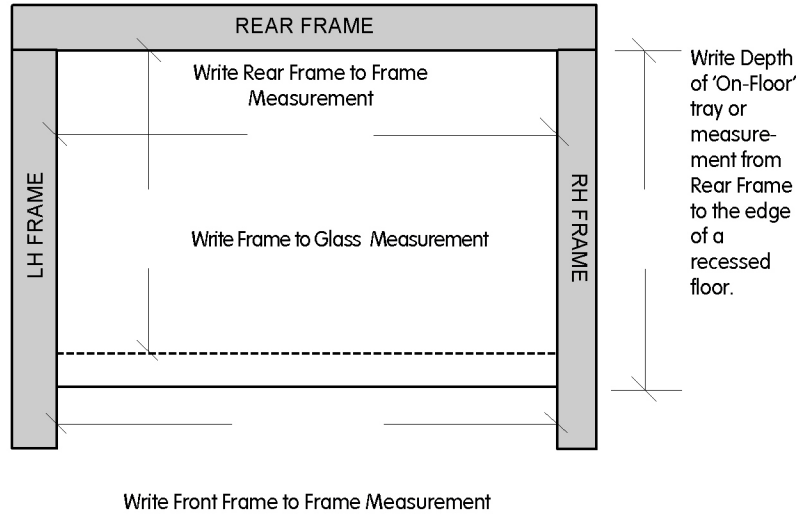

SHOWER A2

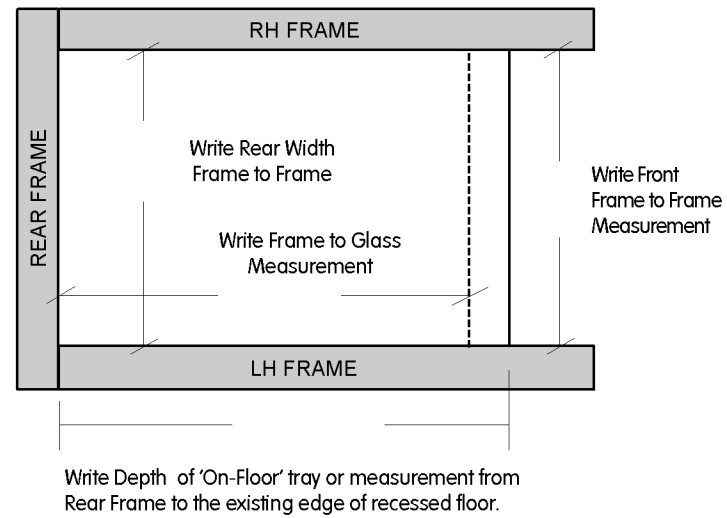


RECESSED TRAY

If a rebated / recessed floor has been formed prior to filling-out the custom worksheet, write down the Rear Frame to Front Edge measurement of the formed floor recess. If the floor rebate / recess has not been formed, contact Impresa for the required dimensions and floor rebate depth.


ON-FLOOR TRAY

The tray 'depth' (front to rear) requested for manufacture is be the overall size including the 'threshold / hob' of the tray. NOTE: The STILE standard threshold width is 35mm. The STILE STAINLESS standard threshold width is 50mm.

SHOWER A3

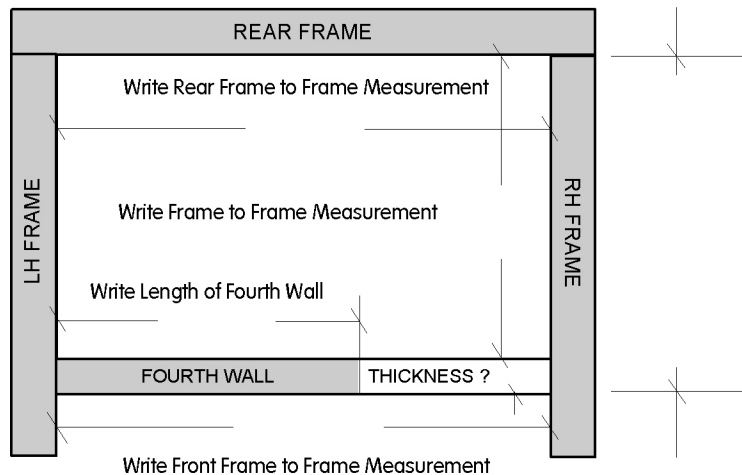

SHOWER A4

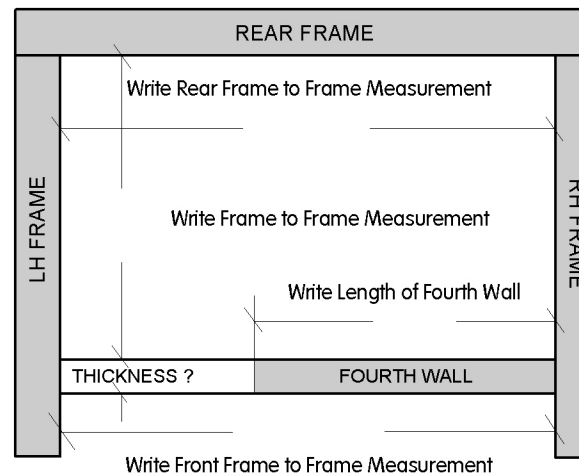

The glass is positioned at the inside of the threshold -- see PDF tray profile drawings on website.

NOTE:

The correct installed-position of a shower tray is a minimum 7mm off the rear and side wall framing. This ensures the tray finishes flush with or is slightly setback from the face of the wall lining when the lining is affixed to the framing.

**CORNER TRAY / ON-FLOOR**

Complete this section only if a **corner** shower tray is to be installed **onto** a bathroom floor. Provide measurements as requested below. See Corner Tray 'Plan View' drawings on Page 6 for assistance to determine the required dimensions. Contact Impresa for assistance if required.

REAR FRAME TO FRONT OF TRAY THRESHOLD \_\_\_\_\_ REAR FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

SIDE FRAME TO FRONT OF TRAY THRESHOLD \_\_\_\_\_ SIDE FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

**THREE-WALL CORNER SHOWER ONLY**

REAR FRAME TO THIRD WALL \_\_\_\_\_

THIRD WALL LENGTH \_\_\_\_\_

THIRD WALL THICKNESS \_\_\_\_\_

**CORNER TRAY / RECESSED-FLOOR**

Complete this section only if a **corner** shower tray is to be installed **into** a bathroom floor. If framing is in-situ and the recessed / rebated shower floor has been created prior to completing this form, provide measurements as requested below. Provide measurements as requested below. See Corner Tray 'Plan View' drawings on Page 6 for assistance to determine the required dimensions. If recessed floor has not been created, contact Impresa for required shower-floor depth.

BATHROOM FLOOR TO SHOWER FLOOR DEPTH (i.e. PLY TO PLY / CONCRETE TO CONCRETE) \_\_\_\_\_

REAR FRAME TO RECESSED-FLOOR FRONT EDGE (if floor recess is formed) \_\_\_\_\_

SIDE FRAME TO RECESSED-FLOOR FRONT EDGE (if floor recess is formed) \_\_\_\_\_

REAR FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

SIDE FRAME TO GLASS POSITION (OUTSIDE) \_\_\_\_\_

**THREE-WALL CORNER SHOWER ONLY**

REAR FRAME TO THIRD WALL \_\_\_\_\_

THIRD WALL LENGTH \_\_\_\_\_


THIRD WALL THICKNESS \_\_\_\_\_

CUSTOM WORKSHEET / PLAN VIEW


2-WALL AND 3-WALL CORNER TRAY

ON-FLOOR OR RECESSED FLOOR INSTALLATION


SHOWER C1

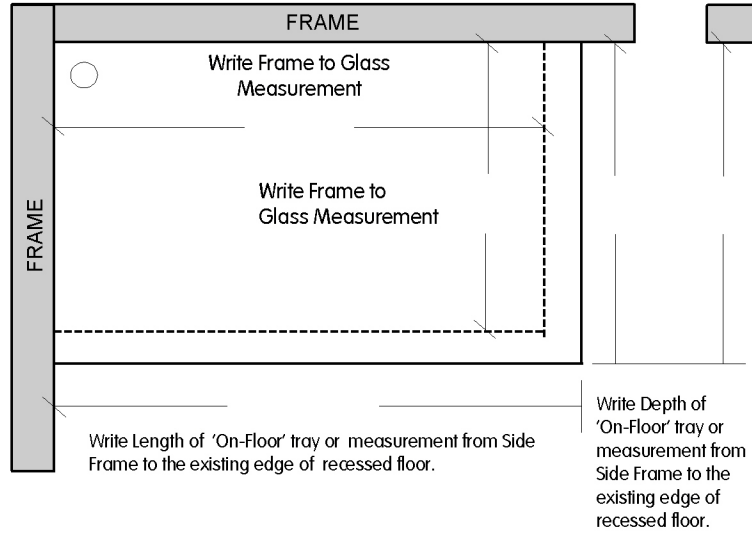


SHOWER C2

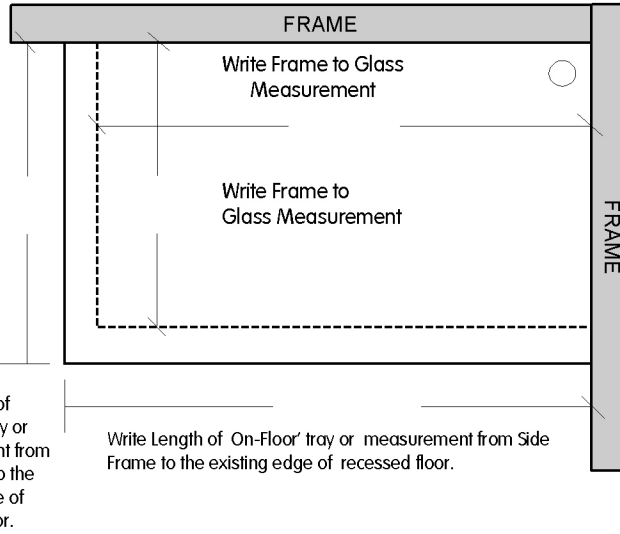


SHOWER C3

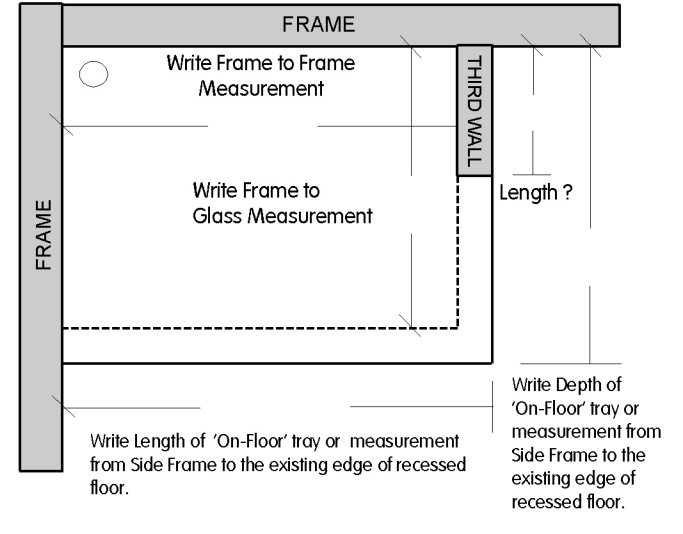

SHOWER C4

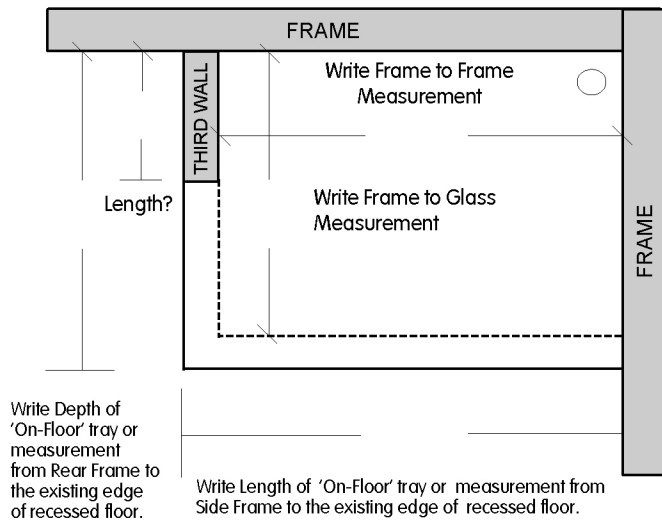

SHOWER C5

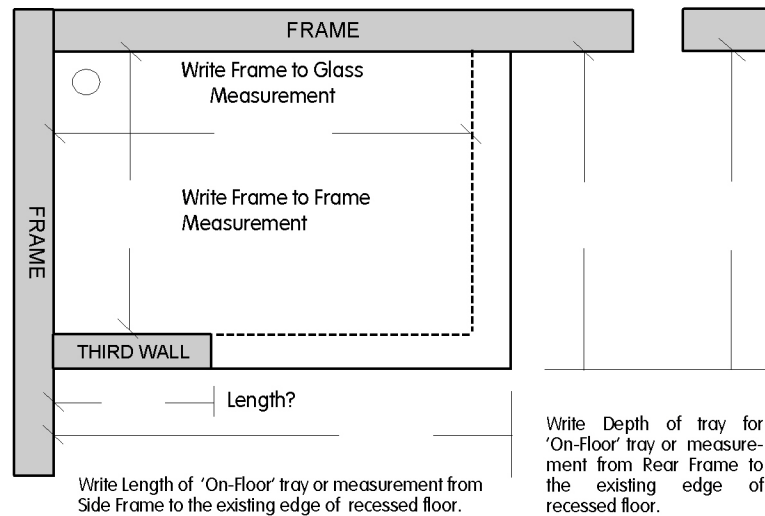

SHOWER C6

